

BOXX FLEXX Enclosure Controller




BOXX FLEXX Enclosure Controller

Installation:

- Remove 2x Screws and Blank Plate
- Slide Controller Module into chassis




- Route Grey cable thru grommet
- Connect grey cable to Planner board.

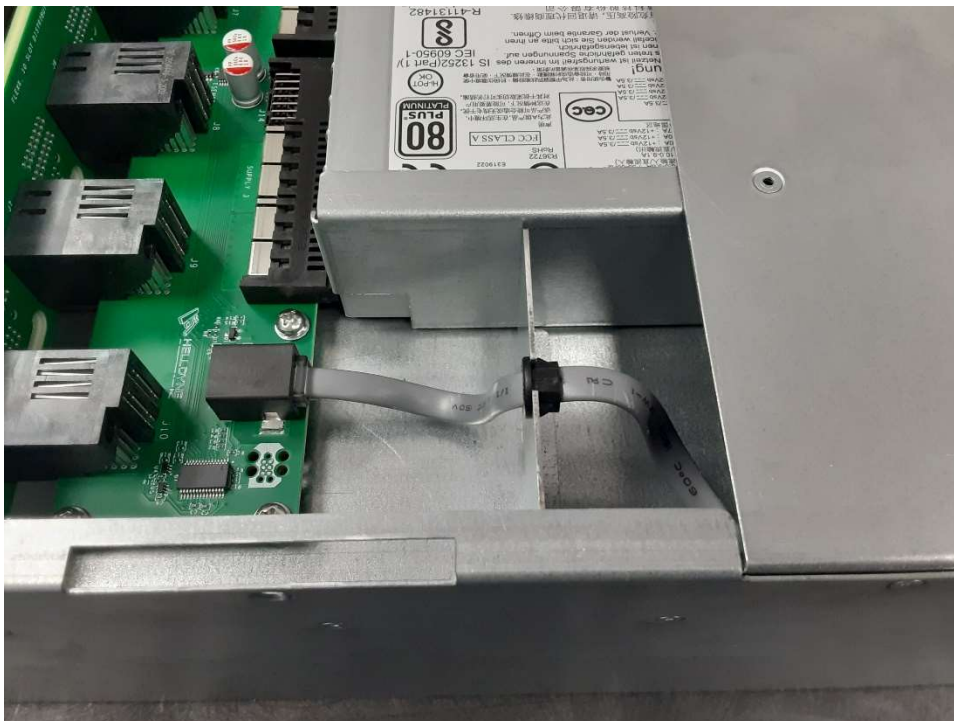

BOXX FLEXX Enclosure Controller

Menu:

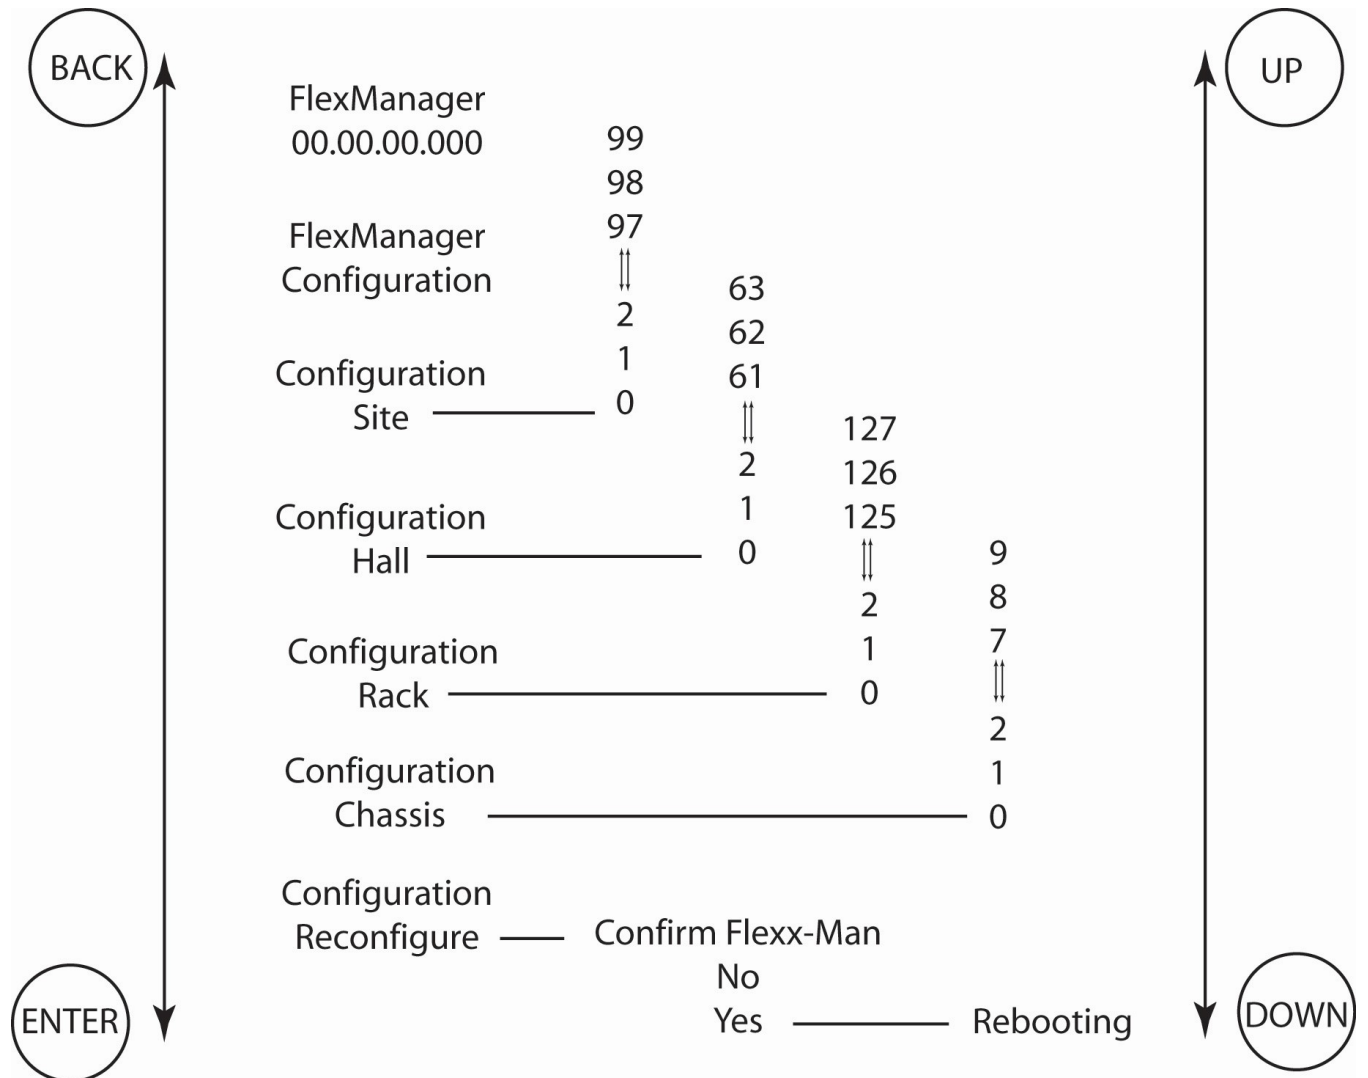

BOXX FLEXX Enclosure Controller

Interface:

← → ↻ 🏠 ⚠ Not secure |

FLEXX by BOXX

Rediscover Upload Firmware

Chassis ▲
Power
---ps2
Slots
---slot0
---slot2 ▼

Status

www.boxx.com
Support@boxx.com
512-835-0400 Toll Free 877-877-2699
Version: Flexx-1.9P/1.2

BOXX FLEXX Enclosure Controller

Chassis

The screenshot shows the 'Chassis' management page. At the top left is the 'FLEXX by BOXX' logo. Below it are two buttons: 'Rediscover' and 'Upload Firmware'. A dropdown menu is open, showing 'Chassis' with sub-items: 'Power', '--ps2', 'Slots', '--slot0', and '--slot2'. A green 'Status' button is next to the dropdown. The main content area is titled 'Chassis' and contains a table with the following columns: 'Select', 'Version', 'Bus Control', 'Wattage', 'Temp (C)', 'Uptime', 'Bus Voltage (V)', 'Serial Number', 'Firmware', and 'Hostname'. The table has one row of data: 'All', '0x2c', 'Normal', '2548', '26.2', '3673', '12.2', '163344016', 'Reset', 'FlexxManager0'. The 'Firmware' column has a dropdown menu with options 'Reset' and 'FW Update'. At the bottom left, there is contact information: 'www.boxx.com', 'Support@boxx.com', '512-835-0400 Toll Free 877-877-2699', and 'Version: Flexx-1.9P/1.2'.

Chassis

Select	Version	Bus Control	Wattage	Temp (C)	Uptime	Bus Voltage (V)	Serial Number	Firmware	Hostname
All None	0x2c	Normal Force On Force Off	2548	26.2	3673	12.2	163344016	Reset FW Update	FlexxManager0

www.boxx.com
Support@boxx.com
512-835-0400 Toll Free 877-877-2699
Version: Flexx-1.9P/1.2

Power

The screenshot shows the 'Power Supplies' management page. At the top left is the 'FLEXX by BOXX' logo. Below it are two buttons: 'Rediscover' and 'Upload Firmware'. A dropdown menu is open, showing 'Chassis' with sub-items: 'Power', '--ps2', 'Slots', '--slot0', and '--slot2'. A green 'Status' button is next to the dropdown. The main content area is titled 'Power Supplies' and contains a table with the following columns: 'Position', 'Model', 'Revision', 'Serial Number', 'Wattage Input (V)', 'Output (V)', 'Output (A)', 'Output (W)', 'Inlet (C)', 'Hotspot (C)', and 'Fan (RPM)'. The table has one row of data: '2', 'PWS-2K03P-1R', 'REV1.5', 'P2K03CK22ZT1230', '2548', '122.0', '12.2', '7.8', '95', '38.0', '49.0', '1680'. At the bottom left, there is contact information: 'www.boxx.com', 'Support@boxx.com', '512-835-0400 Toll Free 877-877-2699', and 'Version: Flexx-1.9P/1.2'.

Power Supplies

Position	Model	Revision	Serial Number	Wattage Input (V)	Output (V)	Output (A)	Output (W)	Inlet (C)	Hotspot (C)	Fan (RPM)	
2	PWS-2K03P-1R	REV1.5	P2K03CK22ZT1230	2548	122.0	12.2	7.8	95	38.0	49.0	1680

www.boxx.com
Support@boxx.com
512-835-0400 Toll Free 877-877-2699
Version: Flexx-1.9P/1.2

BOXX FLEXX Enclosure Controller

Slots

FLEXX by **BOXX**

Rediscover Upload Firmware

Chassis
Power
--ps2
Slots
--slot0
--slot2

Status

Slots

Select	Position	Version	Power Control	Power State	Uptime	12V0 (V)	12V1 (V)	Firmware	Blade Serial#	Model Number
All	0	0x26	Normal	On	15067	12.2	12.2	Reset	Byyyyyyy	FLEXX
None	2	0x26	Reset	On	15127	12.2	12.2	SW Update	Byyyyyyy	FLEXX

Apply

Normal
Reset
Short Press
Long Press
Force On
Force Off
Standby Off

www.boxx.com
Support@boxx.com
512-835-0400 Toll Free 877-877-2699
Version: Flexx-1.9P/1.2